HE-1000 HAND EDGER

User's Manual

LUXVISION

Notification

Dear Users,
Thank you for your purchase of HE 1000 Hand Edger Manual. Please take time to read our user's manual carefully before use.
This guarantees you to make full use of this unit and prolongs the operation life of this unit.

Precautions

If you have detected abnormal heat, smoke, noise or smell, immediately stop using the product.
In the event of an abnormality, turn off the power and disconnect the power plug from the power socket. Continuing to use the product may result in electric shock or fire.

Observe the instructions given below regarding the power cable:

- Be sure to use the supplied or specified power cable.
- Do not modify, forcibly bend, kink or pull the power cable.
- When disconnecting the power cable from the AC outlet, be sure to hold the cable by the plug.
  Pulling the cable may cause wire breakage or shot circuit, resulting in fire or electric shock.
- Do not connect or disconnect the plug of the power cable to/from the AC outlet using wet hands.
  Doing so may result in electric shock.
- Do not touch the product with wet hands while the power cable is connected to the AC outlet.
  Doing so may result in electric shock.
- If the product will not be used for a long period, disconnect the power cable from the power source. Leaving the cable connected to the power socket for a prolonged period will consume electricity and may result in heating.

1. Name of Parts

Accessories

Unpacking the HE 1000 Hand Edger, please check the auxiliarles:

Power cable	1	Water squeeze bottle	1
Oilstone stick	1	Water drain container (inside the unit)	1

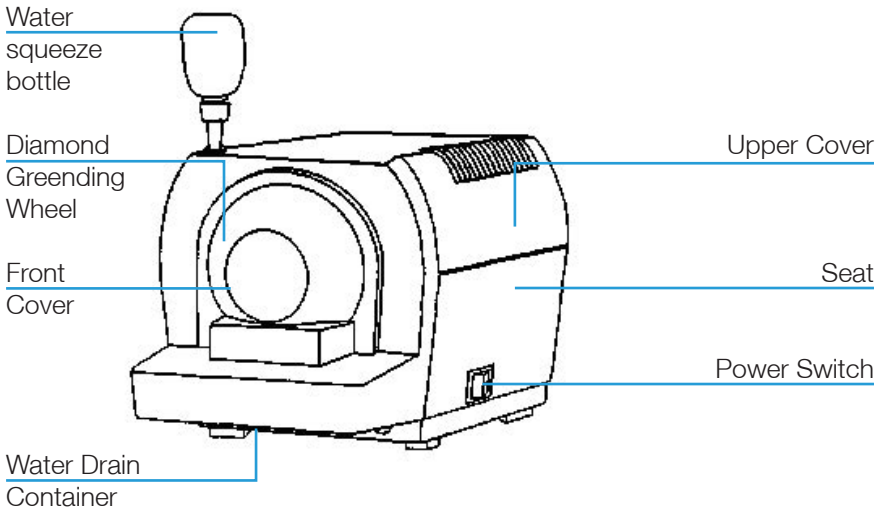

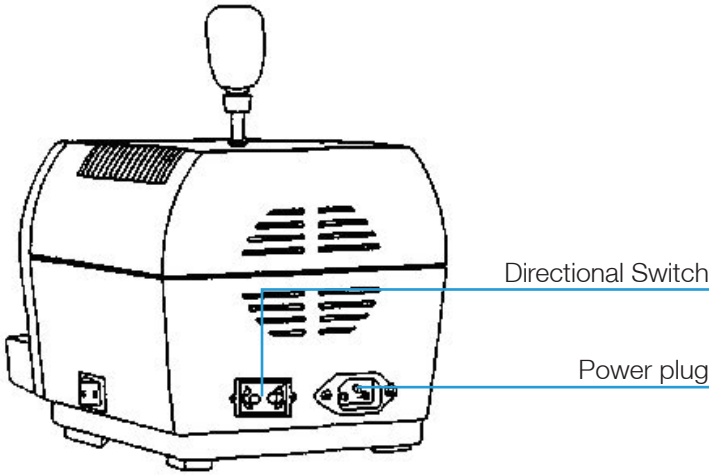

2. Operation

- When using this unit, draw out the water drain container, put the sponge into the clean water and squeeze it by hand, and put it to the original position until it absorbs the water fully, put it back to the water drain container. Then press the power switch on the right.

- When a dry grinding occurs during operation, put the water squeeze bottle with full water on the hole at the left, and squeeze the bottle lightly to water the sponge.

- After a period of time, draw out and clean the drain container, and change the sponge if necessary.

- When the grinding wheel has been used for a period of time, grinding fatigue will appear (failing to grind in). In this case, use the oilstone stick to recondition the wheel and squeeze the bottle at the same time.

  Note:
  The directional switch on the left side of the unit is a backward and forward selector (seldom use). If backward or forward turning is needed, first turn off the power switch, don't press the directional switch until the grinding wheel stop completely.
  Operation: Press fully the required turning direction with a small screwdriver, the switch is connected when a click sound occurs.

LUXVISION is not responsible or liable for indirect, special or consequential damages arising out of or in connection with the use or performance of the product or damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, costs of removal or installation or other consequential damages of whatsoever nature. Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the above limitation may not apply to you.

Every effort has been made to ensure the accuracy of this manual. However, LUXVISION, makes no warranties with respect to the documentation and disclaims any implied warranties of merchantability and fitness for a particular purpose. LUXVISION, Inc. shall not be liable for any errors or for incidental or consequential damages in connection with the furnishing, performance, or use of this manual or the examples herein. The information in this document is subject to change without notice.

9990 NW 14 Street | Suite 105 | Doral, FL 33172
Telephone: 888.334.4640